


# Nouveau®

## **Fan Desk 30cm**

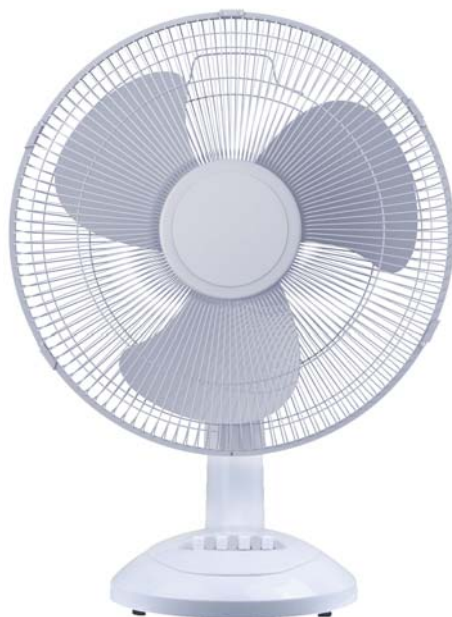

This manual applies to the following products  
SKU: 361427 / Model: FT-30A

# Nouveau.

## **Table of Contents**

Important Safety Instructions

Assembly

Operations

- Speed Control
- Oscillation Control
- Tilt Control

Disposal of Appliances and Batteries

**Please read this manual carefully before use, and keep for further guidance**

# Nouveau.

## **Important Safety Instructions**

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.**

**UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.**

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for industrial or outdoor use.
3. To protect against electric shock, do not place fan in window, immerse unit, plug or cord in water or spray with liquids.
4. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Press the OFF button and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
7. To disconnect the fan, first press the OFF button, grip the plug and pull it from the wall outlet. Never pull by the cord.

# Nouveau.

8. Do not operate the fan in the presence of explosive and/or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate the fan with a damaged cord or plug or if the product malfunctions, is dropped or damaged in any manner.
11. Avoid contact with moving fan parts.
12. The use of attachments not recommended by the manufacture may be hazardous.
13. Place the fan on a dry, level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is removed or damaged.

## Assembly

1. Front grill
2. Fan blade
3. Rear grill mounting nut
4. Rear grill
5. Motor shaft
6. Oscillation control
7. Body
8. Screw and nut for grill
9. Blade nut
10. Base
11. Push buttons
12. Decorative plate
13. Screw for base

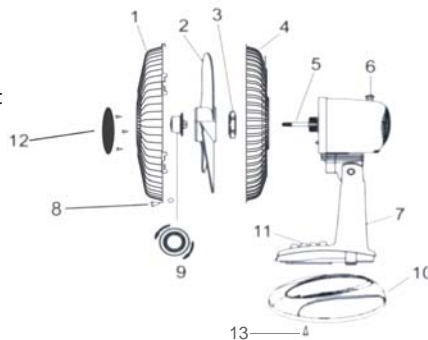

### Part 1:

- Directly insert the fan body into the base, it can be fixed tightly.
- Tighten the screw under the base to make sure the fixation.

### Part 2:

- Remove the blade nut and rear grill mounting nut from the motor shaft .
- Set the rear grille in the proper position with the handle up.
- Fix the rear grill mounting nut tightly to attach the rear grill.
- Install the blade onto the shaft in proper location.
- Install the blade nut on the shaft , make sure it can be installed tightly.
- Place the front guard into position and secure it by fastening the clips over the outer rim. The screw and nut at the bottom of the guard must be tightened.

# Nouveau.

## Part 3:

- Place your fan on a level and dry surface.
- Plug the power cord into AC220-240V wall outlets.

## Operation

### Speed Control

To turn the fan on, press the desired button switch.  
(1= Low, 2=Medium, 3= High).

### Oscillation Control

To make the fan oscillate, push down on the oscillation knob located on the top of the motor housing. To stop the fan from oscillating, pull up on the oscillation knob when the fan is in the desired position.

### Tilt Adjust

To adjust the tilt by screw the nuts on the side of head to be upward or downward.

## Environmentally friendly disposal



### You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

MADE IN CHINA