

Nouveau®

45cm Stand Metal Fan



This manual applies to the following products
SKU: 361441 / Model: FS45-01

Nouveau.

Table of Contents

Important Safety Instructions

Control and features

Assembling The Fan

- Assembling the Stand and Column
- Fitting the Motor Body
- Fitting the Back Guard
- Fitting the Fan Blades
- Fitting the Front Guard

Placement

Height Adjustment

Operation

- Oscillation Control
- After Use

Care and Cleaning

Disposal of Appliances and Batteries

Please read this manual carefully before use, and keep for further guidance

Nouveau.

Important Safety Instruction

This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

UNPLUG OR DISCONNECT THIS FAN FROM THE POWER SUPPLY BEFORE SERVICING.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Always turn the power off at the power outlet before you insert or remove the plug. Remove by grasping the plug, do not pull on the cord.
3. This appliance includes an earthed pin and must be used with a power outlet with an earthed connection.
4. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
7. This product should not be used in the immediate vicinity of water, such as

Nouveau.

bathrooms, washbasins, swimming pools etc. where the likelihood of immersion or splashing could occur.


8. Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat.
 - Direct sunlight
 - Mechanical vibration or shock. Excessive dust.
 - Lack of ventilation, such as a cabinet, bookcase or uneven surface.
9. The fan must be fully assembled before use. Never operate the fan without the guards correctly fitted.
10. This fan is for indoor use only. Never use it outdoors
11. Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
12. Do not leave the fan running unattended
13. Do not operate the product if it is dropped, damaged or showing signs of product malfunction.
14. If the fan is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it by yourself.
15. Switch off and unplug from the outlet when the product is not in use, before assembling or disassembling parts and before cleaning.
16. Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grille when the fan is operating.
17. Do not cover the grille, or operate near curtains, etc.
18. This product is intended for normal domestic/ household use only.
19. Always disconnect the fan when moving it from one location to another. Use the handle to carry the fan.
20. Never use the fan without the supplied stand fitted.
21. Use only as described in this user's guide. Use only the manufacturer's recommended attachments.
22. Be sure the fan is on a stable surface when operating to avoid overturning.
23. Do not mount the fan on a ceiling or wall or stand it on a table or raised surface. It is only intended for floor-standing operation.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

Nouveau.

25. Children should be supervised to ensure that they do not play with the appliance.
26. Ensure that the fan is disconnected from the mains supply before removing the guard.
27. Do not use outdoors.
28. For additional protection, it is recommended to use the appliance with a residual current device (safety switch) with a tripping current not exceeding 30mA in the power socket which supplies power to the appliance.
29. Do not use unit with an extension cord or power board unless it has been checked by a qualified electrician.

Nouveau.

Controls and Features

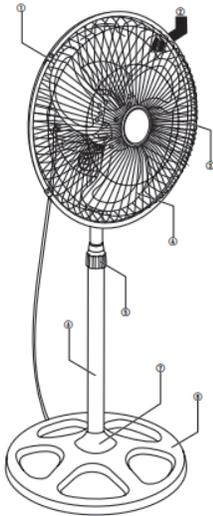

1. Guard Latches
2. Back guard
3. Front guard
4. Fan blades (inside guard)
5. Height adjustment locking collar
6. Column
7. Cosmetic trim
8. Base
9. Oscillation control
10. Power/Speed selector
11. Motor body
12. Guard fixing screws
13. Motor spindle
14. Motor body fixing screw

Assembling The Fan


You may find assembly easier with someone to help. One person can hold the components in place while the other screws the fittings together.

You will also need screwdrivers to tighten screws during assembly.

1. Assembling the stand and column

- Fit the end of the column into the hole in the stand.
- Secure the column with four of the screws and nuts. The nuts will drop into the pockets in the base to prevent them from turning.
- Tighten the screws securely
- Drop the cosmetic trim to the bottom of the column to cover the screws.


The stand and column are now assembled.

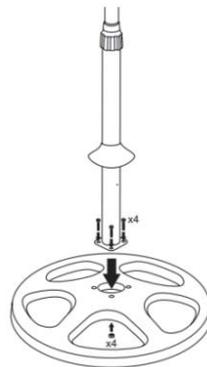

Nouveau.


2. Fitting the motor body

- Slacken the motor body fixing screw (arrowed) and fit the motor body to the top of the column.
- Make sure that the column is pushed completely into the motor body.
- Tighten the fixing screw.

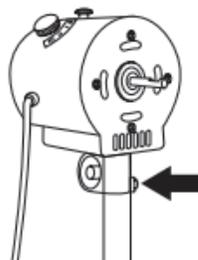


3. Fitting the back guard

- Remove the guard fixing screws (arrowed) from the front of the motor body.

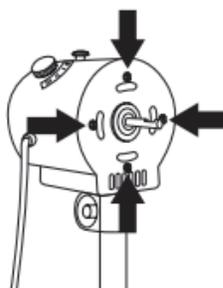

4. Fitting the motor body

- Identify the top of the back guard - the handle is at the top.

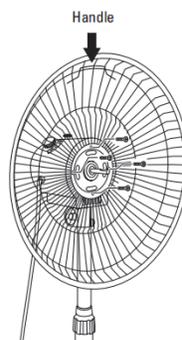


- Fit the back guard onto the motor body with the handle at the top and secure it to the motor body with the four guard fixing screws.

Nouveau.

5. Fitting the fan blades

- Remove the protection sleeve from the motor spindle
- Locate the flat on the spindle (arrowed) and turn the spindle so this faces upwards.

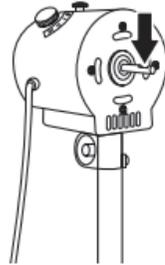


6. Fitting the fan blades

The fan blade fixing screw will tighten onto this face.


NOTE: The back guard is not shown in this drawing for clarity.

- Place the fan blades onto the spindle with the screw on the fan shaft facing upwards. The tip of the screw must rest on the flat on the drive shaft.
- Align the fan with the end of the motor spindle, then use a long screwdriver to tighten the fixing screw onto the shaft.

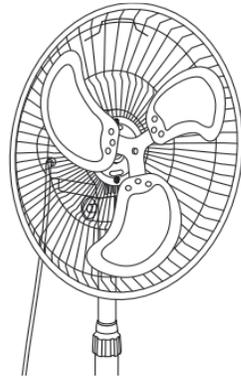

7. Fitting the front guard

- Remove the small screw and nut from the rim of the front guard.
- Open the four clamps around the rim of the front guard fully.
- Hook the clip at the top of the front guard over the centre top of the back guard.
- Fit the small screw and nut through the hole at the bottom of the guards as shown below. Finger tighten the nut.
- Hold the two guards together and close the four clamps around the rim to secure the two guards in place.

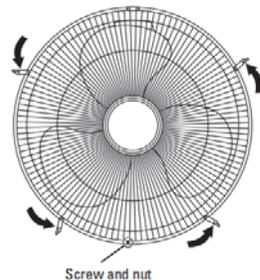

Nouveau.

- Check that the guards are clamped together by all four clamps.
- Fully tighten the small screw and nut.

Your fan is now ready to use.

Placement

- The fan is designed for floor-standing use only.
- The fan must stand on the supplied stand. It is not suitable for wall or ceiling mounting.
- Place the fan on a flat, stable surface of the floor close to a power outlet and out of the reach of children and pets.
- Check that the power cord is not hanging where it can be pulled accidentally or cause a trip hazard.

Height adjustment

The height of the fan head can be adjusted.

- Disconnect the fan from mains power.
- Slacken the height adjustment locking collar.
- Raise or lower the fan head to the height you want.
- While holding the fan head in position, tighten the locking collar.
- Moving the fan

Disconnect the fan from mains power. Lift the fan by the carrying handle and move it to a new position.

Operation

Connecting power

- Put the knob on the "OFF" location to ensure the fan is switched off.
- Connect the mains plug to the outlet.

Power/Speed selection

- Turn the Power/Speed selector to switch the fan on at low (1), medium (2), or high (3) speed.
- Turn the Power/Speed selector to the "OFF" position to switch the fan off.

Oscillation control

The fan can be set to oscillate in an arc for a wider ventilation angle.

- Press the oscillation control down to start oscillation. The fan will oscillate slowly back and forth.
- Pull the oscillation knob up to stop oscillation. The fan will remain stationary in the current position.

Nouveau.

After Use

Turn the Power/Speed selector to the "OFF" position to switch the fan off and unplug the power cord from the mains supply.

If necessary, move the fan to an area that is out of reach of children and pets.

Care and Cleaning

The height of the fan head can be adjusted.

- Switch off the fan and unplug it from the mains supply.
- Clean the guards and air vents on the motor body with the brush attachment of a vacuum cleaner.
- Wipe the casing of the motor body and stand with a barely damp cloth. Dry thoroughly before next use.

Never immerse the fan or any part of it in water.

Never clean the fan with scourers, abrasive pads or chemicals.

Environmentally friendly disposal



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

MADE IN CHINA