



Operating Instructions

5L Evaporative Cooler



Model: GCEV220

General Care and Safety Guide

Thank you for choosing this Goldair Select product. This appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully and keep them for future reference.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Ensure that the fan is switched off from the supply mains before removing the guard.
5. Use only the voltage specified on the rating plate of the appliance.
6. Keep all objects at least 1 Metre from the front, sides and rear of the appliance
7. This appliance is intended for household use only and not for commercial or industrial use.
8. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
9. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
10. Always unplug appliance when not in use.
11. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
12. If your appliance does not work, or is not working properly, contact the place of purchase. Repair work on the appliance by unqualified persons can cause serious risk to the user.
13. Ensure hands are dry before handling the plug or the main unit.
14. Carry out regular checks of the supply cord to ensure no damage is evident.
15. Ensure that the cord is fully extended (not coiled) while in use.
16. Avoid contact with the moving parts. Keep hands, hair, clothing, away from blade of the fan during operation to reduce the risk of injury to person and/or damage to the unit.
17. Switch off and use handles provided when moving.
18. It is recommended that this fan is plugged directly into the wall socket.
19. A correctly specified, undamaged extension cord may be used with this fan provided it is used in a safe manner.

General Care and Safety Guide

20. Never place appliance close to radiant heat source.
21. Never operate in areas where petrol, paint or other flammable liquids are used or stored.
22. Never use the appliance to dry clothes.
23. Never insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
24. Never use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
25. Never connect the appliance to mains supply until completely assembled and adjusted.
26. Never remove plug from power socket until the appliance has been switched off.
27. Never remove plug from power socket by pulling cord – always grip plug.
28. Never twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
29. Never use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
30. Due to the risk of injury, never use this appliance for any purpose other than its intended use. This appliance is intended for use in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses, by clients in hotels, motels, bed and breakfast type environments and other residential type environments
31. Never use this appliance outdoors.
32. Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any manner. Have the appliance checked and repaired by a qualified electrician if repair is necessary.
33. Never place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.

TECHNICAL SPECIFICATION

Model:	GCEV220
Supply:	220-240VAC 50Hz
Wattage:	60W

General Care and Safety Guide

The remote control supplied with this heater uses a CR2025 coin type battery.

DANGER IF SWALLOWED

Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

If swallowed, go straight to a hospital emergency room.

Dispose of used batteries immediately.

WARNING!




DANGER IF SWALLOWED

Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.


If swallowed, go straight to a hospital emergency room.

Dispose of used batteries immediately.

Components

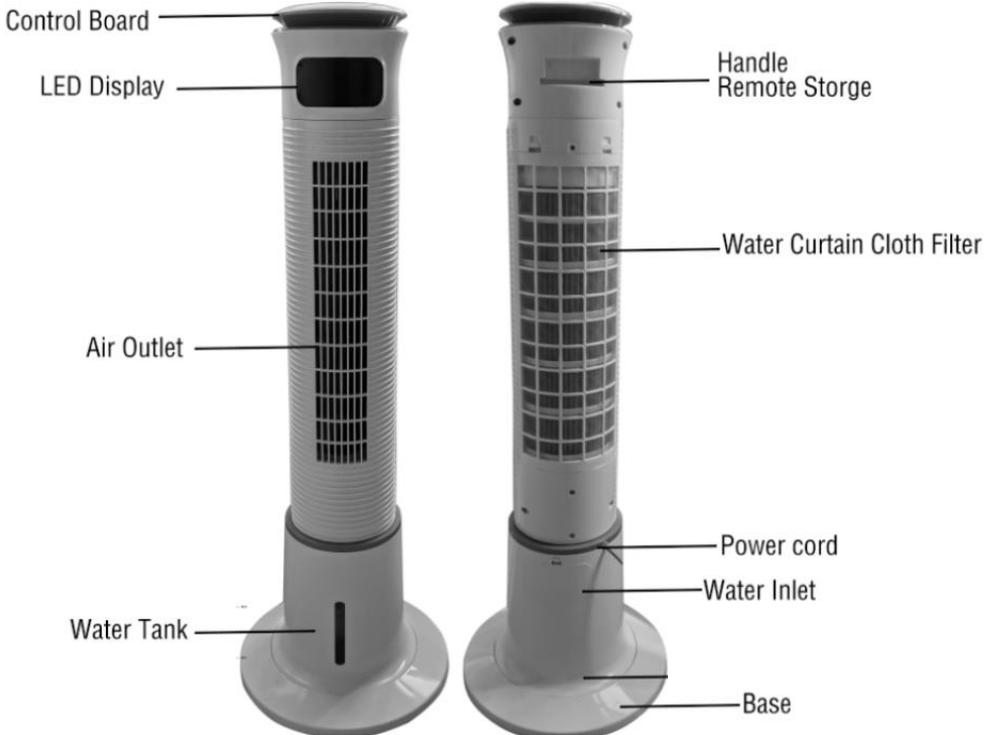


Remote Control

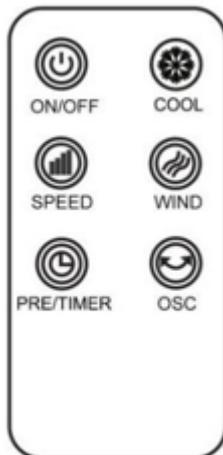


Assembly

Please refer to the following steps for the base installation.


Connect the two semi-circular base parts.

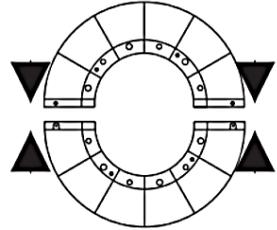

Use two screws to fix the two parts of the base together.

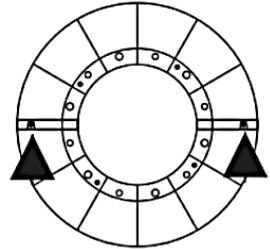

Connect the assembled base to the bottom of the main fan body with the 4 screws provided.

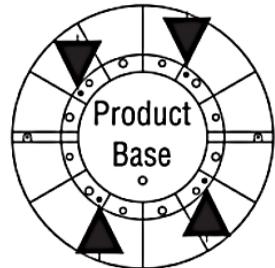

After the base is installed, the fan can be placed in the upright position.

Operating your Fan

Always choose a safe location for the fan, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance

Place the fan on a dry, level and sturdy surface.

Add Water

Open the water tank cover on the rear of the appliance and add water slowly.

When adding water, observe the water level through the water level window on the front of the appliance to control the amount of water added. Do not fill above the MAX water line.


Adding Ice Packs

Place the ice packs in the freezer for a minimum of 6 hours.


When ready to be used place 1 ice pack into the water tank being careful to avoid any damage to the water circulation system.

When you press the 'COOL' function on the appliance, the water will be much colder and give more effective cooling.

As the water increases to room temperature it may be necessary to remove the thawed ice pack and place in a frozen one.

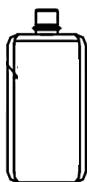


Ice Pack

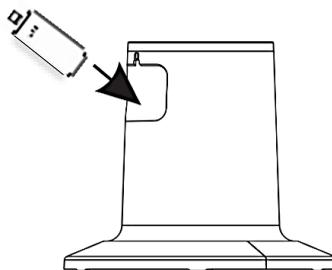


Note: If the ice pack becomes damaged it should be disposed of. Do not allow children to play with the ice packs.

Operating your Fan

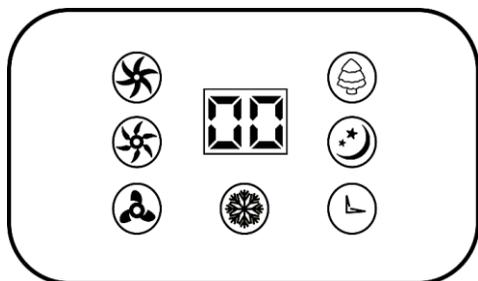

Display

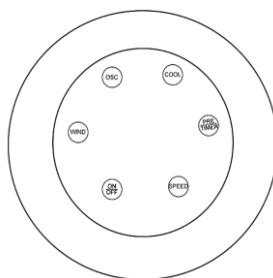

Control Panel

This fan can be operated by using the control panel at the top of the appliance or by using the remote control.

When you turn power on at the wall, you will here a BEEP and the fan will be in Standby.

Power

To operate the fan, press the ON/OFF button; the fan will start at Low speed.

Speed

To adjust the fan speed, press the SPEED button, with each press the speed setting will be adjusted from Low to Medium and High.

Wind

This fan has 3 wind modes; normal, natural & sleep. 'Natural' and 'Sleep' display on the control panel when selected. Press the mode button to choose between the three wind modes. If no indicator is lit, the fan is operating in 'Normal' mode.

Oscillation

To use the fan with oscillation, press the OSC button on the control panel to start. To stop oscillation, press the OSC button again.

Cool

When the fan is operating, press the COOL button to start the cold wind function. The display will illuminate the COOL icon.

Press this button again to turn off the cool wind function.

Note: when the water tank is low the cold air function will not work. You will need to add more water as detailed earlier in this manual.

Operating your Fan

Timer

This fan is equipped with a 15 hour timer.

This enables you to preset the fan to switch ON or OFF automatically at a chosen number of hours has elapsed.

Turn On

With the fan in standby, press the timer button repeatedly to select 1 hour, 2 hours, etc, to a maximum time setting of 15 hours. The number of hours still to elapse will show on the digital display.

Once the time has elapsed the fan will turn on in low speed mode.

Turn Off

With the fan operating, press the timer button repeatedly to select 1 hour, 2 hours, etc, to a maximum time setting of 15 hours. The number of hours still to elapse will show on the digital display.

Once the time has elapsed the fan will turn Off and go into standby mode.

If you wish the fan to run continuously, ensure the timer is set to 0.

Remote Control

Remote control operations are identical to the functions of the fan control panel.

The remote control supplied with this heater


Uses a CR2025 coin type battery.

DANGER IF SWALLOWED

Keep batteries out of reach of children.

Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. If swallowed, go straight to a hospital emergency room.

Dispose of used batteries immediately.

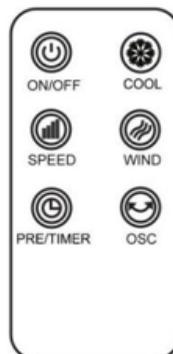

IMPORTANT! NEVER COVER THIS APPLIANCE!

Cleaning

The fan requires regular cleaning to ensure trouble free operation.

Ensure that the fan is switched off from the supply mains before removing the guard.

Unplug the fan from the mains supply before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the fan to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Ensure the fan is dry before plugging back into the mains supply.

Do not attempt to dismantle the fan. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

Proof of purchase

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

Goldair[™]

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9365 5100
Phone 1300 465 324
info@cdbgoldair.com.au



One Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **one year**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits to you given by this warranty are in addition to other rights and remedies available to you under a law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland, 0745

Phone +64 (0)9 917 4000

Phone 0800 232 633

www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9365 5100

Phone 1300 GOLDAIR (1300 465 324)

www.goldair.com.au

Goldair One Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.

Goldair™



CDB  Goldair™

New Zealand
PO Box 100707,
North Shore Mail Centre,
Auckland, 0745
www.goldair.co.nz

Australia
PO Box 574,
South Morang,
Victoria, 3752
www.goldair.com.au