


home living
basix.

FLAT PACK KITCHENS



**Build your
new kitchen
in 3 simple steps!**

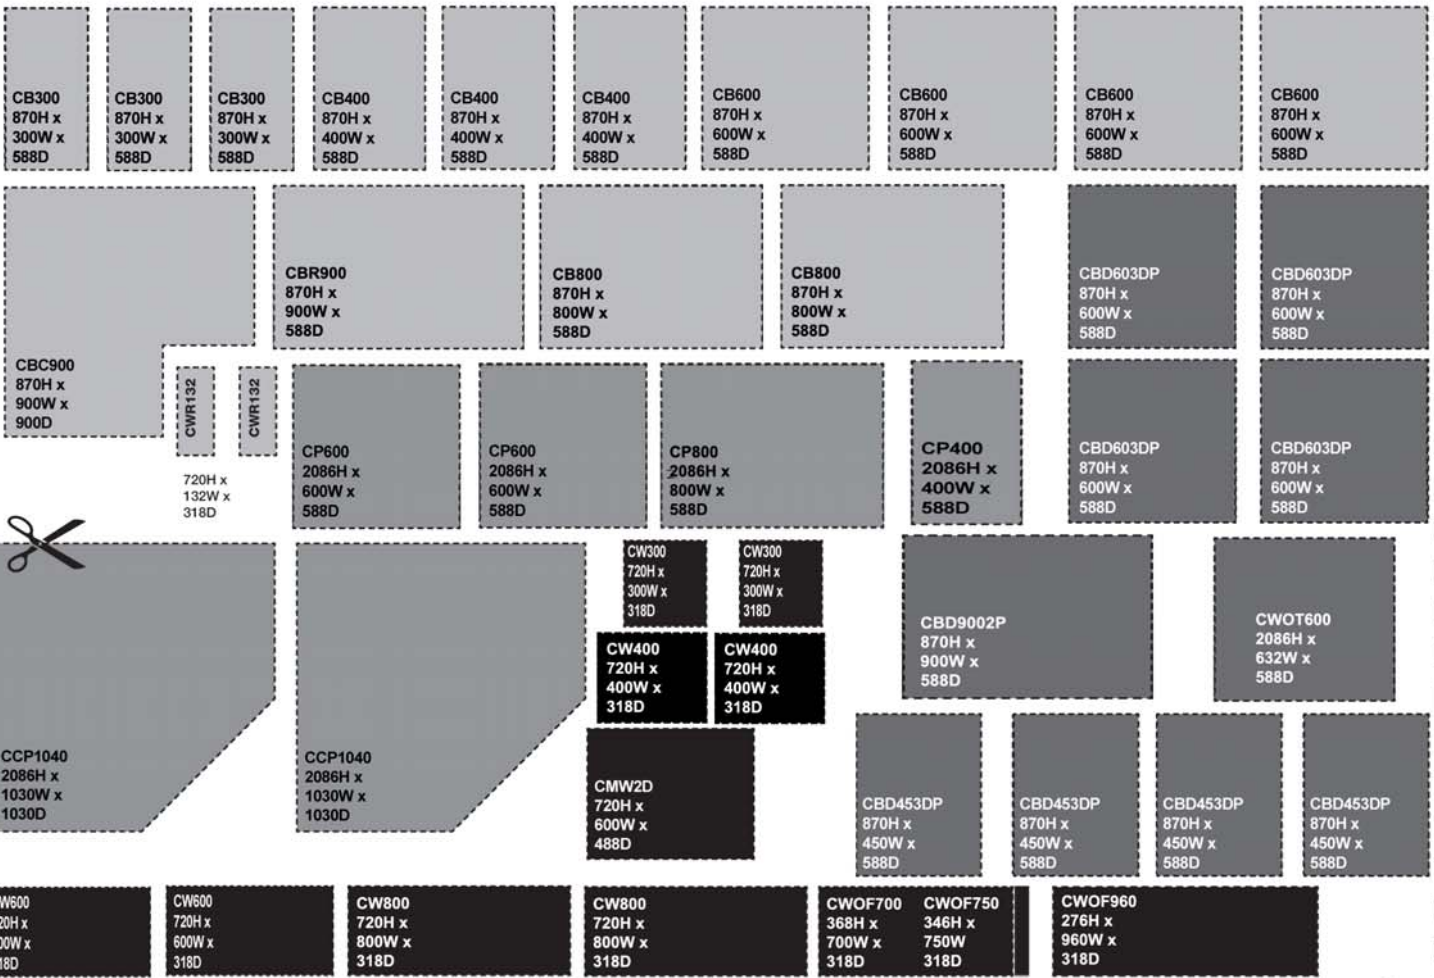

CABINET SPECIFICATIONS

20 Standard Kitchen Cabinets

- Kitchen cabinet: white gloss faced 2 sides, 16mm particle board.
- All floor cabinets have a 16mm solid back.
- Floor cabinet depth - 588mm including door or drawer front.
- Wall cabinet depth - 318mm including door.
- Pantry cabinet depth - 604mm including door and straight shelves.
- Coloured end panel or tall filler required to finish these cabinets.
- Walk-in-corner pantry depth - 592mm. All white with curved shelves. Coloured panels or tall fillers required to finish this cabinet.
- Wall oven tower depth - 604mm with coloured interior and ends.
- Bottom of microwave shelf and top of cabinet are white. Coloured end panels required to finish this cabinet.
- PVC clashing on all edges, 0.6mm on cabinet edges and 2.0mm on all door and drawer edges.
- Door and drawer fronts in 16mm PB with coloured finish one side / white finish on the other.
- Panels are 16mm PB coloured both sides.
- 10mm void at back of all cabinets to help with installation.

Hardware Kits

All hardware supplied carries a 5 year warranty.

- All cabinets supplied with confirmat screws and dowel guides.
- Shelf studs.
- Adjustable peg legs with toe kick clips.
- Harn EKO steel sided drawer slide system for smooth and efficient operation Fully adjustable.
- EKO clip on door hinges and mounts with 3 way adjustment.
- 96mm brushed nickel slimline bow handle supplied with screws and white cover caps.
- Knock in bumper pads supplied.
- Cabinet clamp screws for holding cabinets together.

Hardware excluded

- Screws for fitting end panels and fixing cabinets to walls.

Have your
kitchen
just the
way you
want it –
designed
by you.

It's as
easy as
1, 2, 3.

Let's get started

Kitchens have always been the heart of the kiwi home where great meals get prepared for family and friends morning, noon and night.

Wouldn't it be great to have the kitchen of your dreams just the way you want it – designed by you, assembled by you and installed by you – it's as easy as 1, 2, 3.

Home Living Basix kitchens are the easy, one stop kitchen solution to make that old, cluttered kitchen a thing of the past.

Having the new kitchen of your dreams has never been so easy – or affordable.

Satisfaction is guaranteed because you're in control of the whole process. You can design it at home, buy it when you want and install it when it suits you.

This guide has been designed to provide you with the information you need to create a great new Home Living Basix kitchen.

Just follow these
3 easy steps:

- 1. Design it**
- 2. Plan it**
- 3. Shop it**

Step 1 Design it

When designing your kitchen, plan your layout around the 3 work centres: sink, cooktop and refrigerator.

This will form your imaginary work triangle. These three items should be within easy reach of each other, so that the kitchen revolves around you and not the other way around.



An effective work triangle is typically no smaller than 3.6m when the distance between each item is added together.

Firstly, decide on the style of kitchen that you want, there are examples of some popular designs shown to the right.


It is useful to start planning from the corners as they can be one of the most difficult areas to maximise storage space.

Try to always be aware of the work flow in the kitchen as this will help with your work triangle. Plan for food storage, cleaning up, preparing food, cooking and serving. Also plan for a landing space for items each side of the cooktop and sink.


Keep in mind where your electrical sockets are and also the lighting so you are not working in constant shadows.

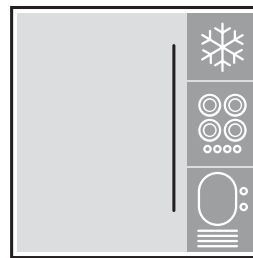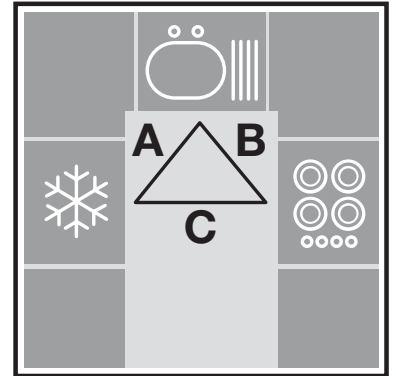


Single line

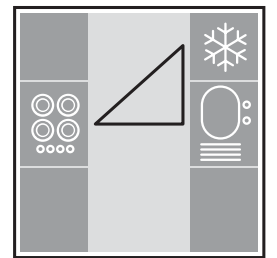

Galley

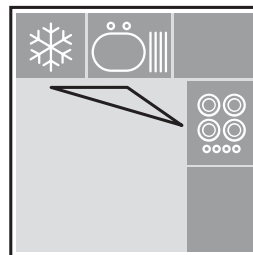

L-shape

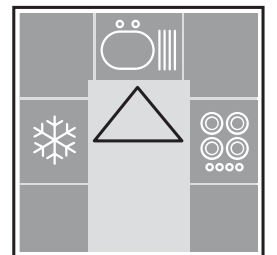

U-shape

Make a design statement by choosing different colours for your floor and wall cabinet doors.

Careful planning of your kitchen layout will help make preparing meals for family and friends a stress-free and enjoyable experience.

Step 2 Plan it

To help with the planning of your new Home Living Basix Kitchen, we have provided you with an easy-to-use planning grid and a range of cut-out kitchen units.

These can help you transform your dream of a new kitchen into reality and provide you with the certainty that it's all going to work.

Just remember that our in-store staff are always happy to assist you with any questions that you may have.

Please ensure that you follow these easy steps:


1. Sketch out your kitchen making sure to include any awkward wall shapes or angles.
2. Include any doors, windows, electrical and gas points and any other fixed features.
3. Accurately measure the room making sure that all fixed features are included on the drawing with their measurements from the nearest wall.
4. It may be useful to always measure from the left-hand corner to the edge of the window / door / opening. Always note which way doors are hinged.
5. Always make sure that the bottom of the windowsill will be above the finished height of the bench top plus cabinetry.
6. Transfer the information on your drawing to your planning grid making sure that everything is to the correct scale. One small square on the grid is equal to 100mm.
7. Cut out the cabinet shapes provided so you can move them around on the planning grid to try different layouts. Place your wall cabinet shapes directly over your base units. You don't have to follow the layout of your original kitchen, it can be as creative as you like. Remember, you are the designer after all, but do ensure it is functional. If you have any questions, our staff are there to help.
8. Once you are happy with the layout, either draw around the shapes or stick them to the grid. It may be useful to glue the wall units to the grid directly behind the base unit.
9. Now that you have your kitchen design on paper you are ready to move on to the next step (Shop it).

By starting in one corner of the room on your plan and working clockwise, you may find it easier to tick off the cabinets on the plan and then the shopping list as you go making sure that nothing is left out. At the end of this exercise you will have a complete shopping list of the items you need. You'll get everything you need from your local Mitre 10.


Planning tips

Do this:


1. When planning, always consider the location of electrics, plumbing, windows and doors. Removal or shifting of these items can easily break the budget before you start.
2. Bored with doing the dishes? Position the sink in front of a window. Be careful that if the window opens inwards, make sure it doesn't hit the tapware.
3. When cabinetry and bench tops run under windows, please make sure the window is above the finished bench top height.
4. Try to allow around 300mm of bench space each side of cook tops to place pots or cooking utensils, also beside sinks.
5. Allow for appliances and access to them. If putting new appliances in, be aware of their installation specs.
6. Have someone check your measurements before buying your Home Living Basix Kitchen.
7. It is advisable to use a coloured tall end panel beside the oven tower when a bench top runs up to this unit. This will cover the exposed cut edge of the bench and protect the drawer and door fronts.
8. The wine rack can be used as a base or wall unit by simply turning the unit over and having the drilled foot holes at the top.

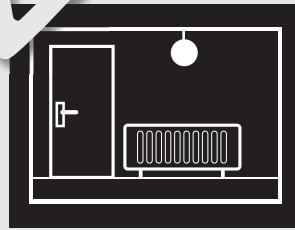


1

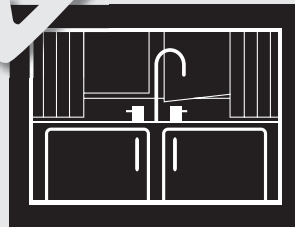

2

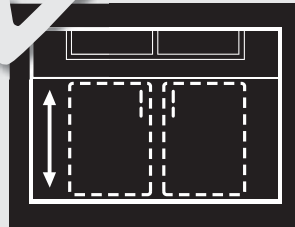


3

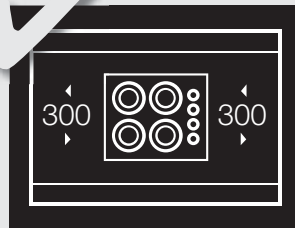


4

Don't Do This:

1. Don't place your cook top too close to your sink, make sure that it is at least 600mm away.
2. Locating cooking appliances too close to the fridge requires it to work much harder to keep food cold, a huge waste of energy and money.
3. Cooking units should never be located under windows or near inward opening doors (especially gas units).
4. Never place wall units over a cook top unless a slimline rangehood is installed in or under the cabinet.
5. Don't forget to allow for the dishwasher, fridge and oven to open into the room without hitting anything.
6. Don't plan wall units unless there is a base unit installed underneath.

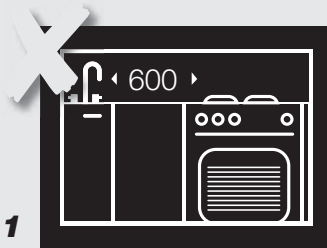

1

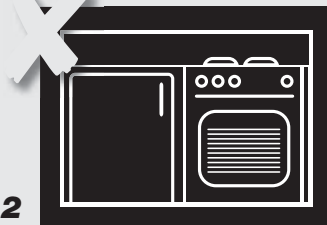

2



3

All houses have 'out of square' walls and uneven floors, so make sure you measure across three different heights and at three different points along the wall to get an accurate picture of the room. Once checked, always take the smallest distance.

Step 3 Shop it

- From your plan, mark off all of your kitchen cabinets next to the matching cabinet on the shopping list below in grid A.
- Once you have marked all your cabinets and check the number of units is correct, please select the door colour that you want to use. Then, by working down your list of cabinets in grid A, write in the number of doors or drawer fronts that you will need for each cabinet in grid B. Be aware that some cabinets need two doors or a number of different items.
- Once this is complete, please refer back to your plan and mark any fillers or end panels that you need to finish off your kitchen on grid C.
- The last job to do is choose the bench tops to suit your new kitchen. This can be done in grid D.

White Gloss	
SKU	QTY

Components Required Qty Per Unit

White (W)		Cream (C)		Putty (P)		Blue Spruce (BS)		Velveteen (V)	
SKU	QTY	SKU	QTY	SKU	QTY	SKU	QTY	SKU	QTY

Codes shown in the 'Components Required' Column are to be followed by the colour code shown above.
For Example a CDF703 in Putty will be CDF703P

FLOOR UNITS

Base Unit 300mm 1 door	CB300	441400		CDF703	1	441432	441433	441434	441435	441436
Base Unit 400mm 1 door	CB400	441401		CDF704	1	441437	441438	441439	441440	441441
Base Unit 600mm 1 door	CB600	441402		CDF705	1	441442	441443	441444	441445	441446
Base Unit 800mm 2 door	CB800	441403		CDF704	2	441437	441438	441439	441440	441441
Base Return Unit 900mm 1 door 1 panel	CBR900	441404		CDF7045	1	441447	441448	441449	441450	441451
				CDBR90	1	441452	441453	441454	441455	441456
Base Corner Unit 900 x 900mm 2 door	CBC900	441405		CDFBC90	1	441457	441458	441459	441460	441461
Under bench Oven Unit 600mm	CUBO600	441406		CDF0106	1	441467	441468	441469	441470	441471
Wine rack 132mm	(Coloured Carcase)			CWR132		441417	441418	441419	441420	441421

DRAWER UNITS

Drawer unit 450mm 4 drawers	CBD453DP	441407		CDF1445	3	441472	441473	441474	441475	441476
				CDF3045	1	441477	441478	441479	441480	441481
Drawer unit 600mm 4 drawers	CBD603DP	441408		CDF1460	3	441482	441483	441484	441485	441486
				CDF3060	1	441487	441488	441489	441490	441491
Drawer unit 600mm 3 drawers	CBD60D2P	441409		CDF1460	1	441482	441483	441484	441485	441486
				CDF3060	2	441487	441488	441489	441490	441491
Drawer unit 900mm 3 drawers	CBD90D2P	441590		CDF1490	1	441604	441605	441606	441608	441607
				CDF3090	2	441609	441610	441611	441613	441612

WALL UNITS

Wall Unit 300mm 1 door	CW300	441586		CDF703	1	441432	441433	441434	441435	441436
Wall Unit 400mm 1 door	CW400	441410		CDF704	1	441437	441438	441439	441440	441441
Wall Unit 600 2 door	CW600	441587		CDF703	2	441432	441433	441434	441435	441436
Wall Unit 800mm 2 door	CW800	441411		CDF704	2	441437	441438	441439	441440	441441
Wall Over fridge Unit 700mm 2 door	CWOF	441412		CDF3635	2	441492	441493	441494	441495	441496
Wall Over Fridge Unit 750mm 2 door	CWOF750	441588		CDF3437	2	441591	441592	441593	441595	441594
Wall Over Fridge Unit 900mm 2 door	CWOF960	441589		CDF2748	2	441596	441597	441598	441603	441599
Wall Microwave Unit 600mm 2 door	(Coloured Carcase)			CMW2D		441422	441423	441424	441425	441426


























TALL UNITS

Pantry 400mm 2 door	CP400	441413		CDF704	1	441437	441438	441439	441440	441441
				CDF1204	1	441503	441504	441506	441507	441508
Pantry 600mm 2 door	CP600	441414		CDF706	1	441442	441443	441444	441445	441446
				CDF1206	1	441509	441510	441511	441512	441513
Pantry 800mm 4 door	CP800	441415		CDF704	2	441437	441438	441439	441440	441441
				CDF1204	2	441503	441504	441506	441507	441508
Walk in pantry 1040 x 1040mm	CCP1040	441416		CDF2106	1	441462	441463	441464	441465	441466
Wall Oven/Microwave Unit 2 drawer	(Coloured Carcase - Inside Faces Only)			CWTO600		441427	441428	441429	441430	441431

PANELS

Base end panel 870x588	CBEP	441531		441532		441533		441534		441536
Wall end panel 720x318	CWEP	441537		441538		441539		441540		441541
Tall end panel 2086x604	CTEP	441542		441543		441544		441545		441546
Bar back 870x1200	CBB12	441514		441515		441516		441517		441518
Bar back 870x1800	CBB18	441519		441520		441521		441522		441524
Bar back 870x2400	CBB24	441525		441526		441527		441528		441529
Toe kick 150x2400	CTK24	441547		441548		441549		441550		441551
Base filler 870x100	CBFP	441552		441553		441554		441555		441556
Tall filler 2086x100	CTFP	441557		441558		441559		441561		441562

Cabinet Range

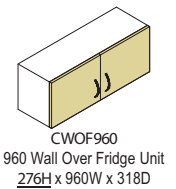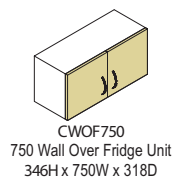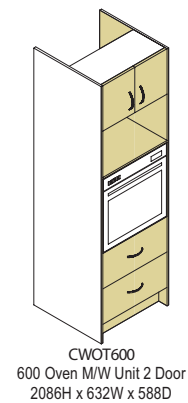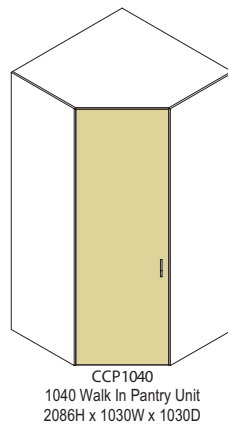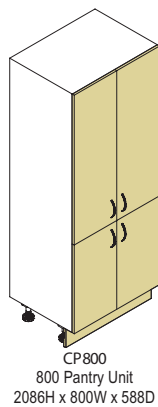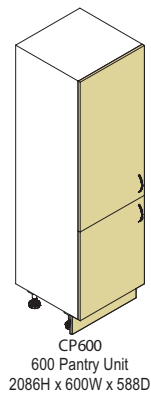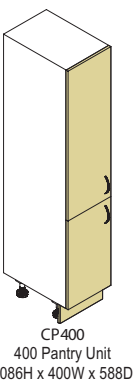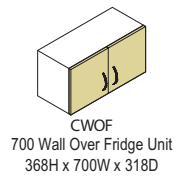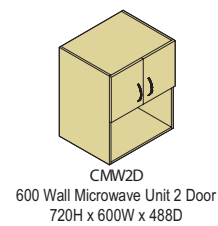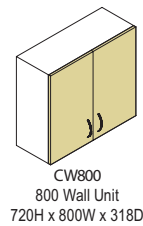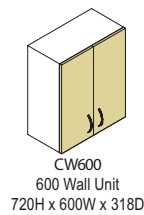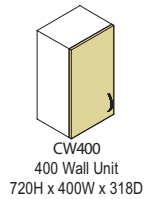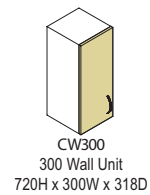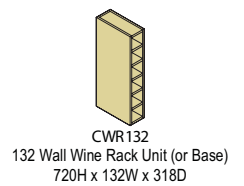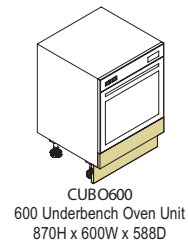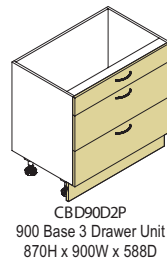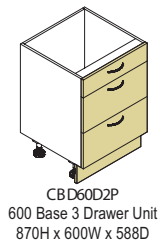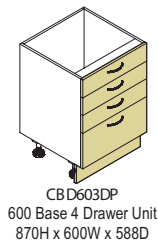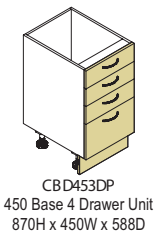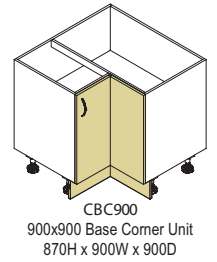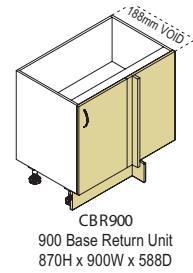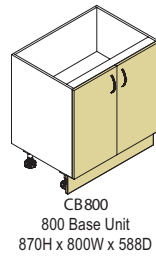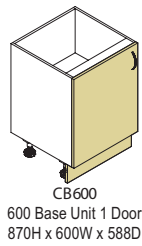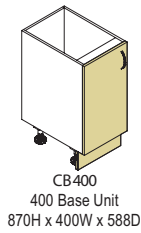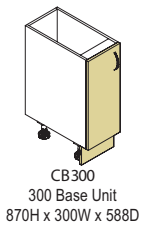

PANELS

CBEP	Base End Panel	870 x 588
CWEP	Wall End Panel	720 x 318
CTEP	Tall End Panel	2086 x 604
CBF	Base Filler	870 x 100
CTF	Tall Filler	2086 x 100
CBB12	Bar Back	870 x 1200
CBB18	Bar Back	870 x 1800
CBB24	Bar Back	870 x 2400
CTK24	Toekick	150 x 2400

Room Profile

Wall Measurements

Wall 1	_____ mm
Wall 2	_____ mm
Wall 3	_____ mm
Wall 4	_____ mm
Wall 5	_____ mm
Wall 6	_____ mm
Wall 7	_____ mm
Wall 8	_____ mm

Appliance Widths

Stove	_____ x _____ x _____ mm
Oven	_____ x _____ x _____ mm
Hob	_____ x _____ x _____ mm
Sink	_____ x _____ x _____ mm
Rangehood	_____ x _____ x _____ mm
Dishwasher	_____ x _____ x _____ mm
Fridge	_____ x _____ x _____ mm
Microwave	_____ x _____ x _____ mm